



# 1


## O-FORMATION CONCEALED CORNER

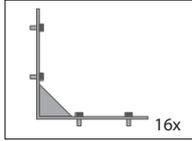

BH0280 (1)



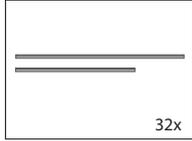


BH0280 (2)

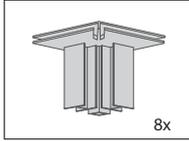


BH0725






### INSTALLING THE CORNERS

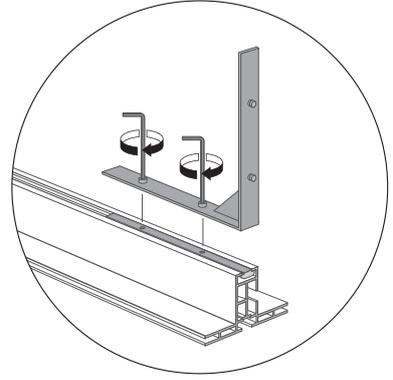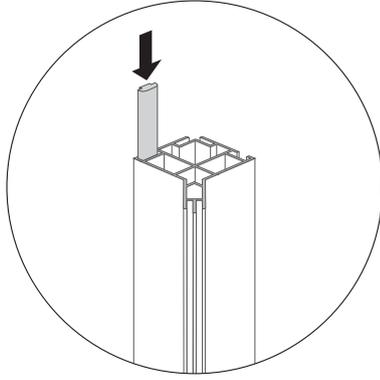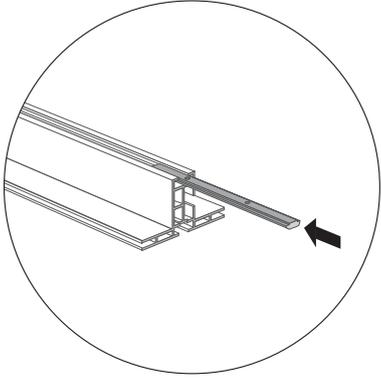





2x

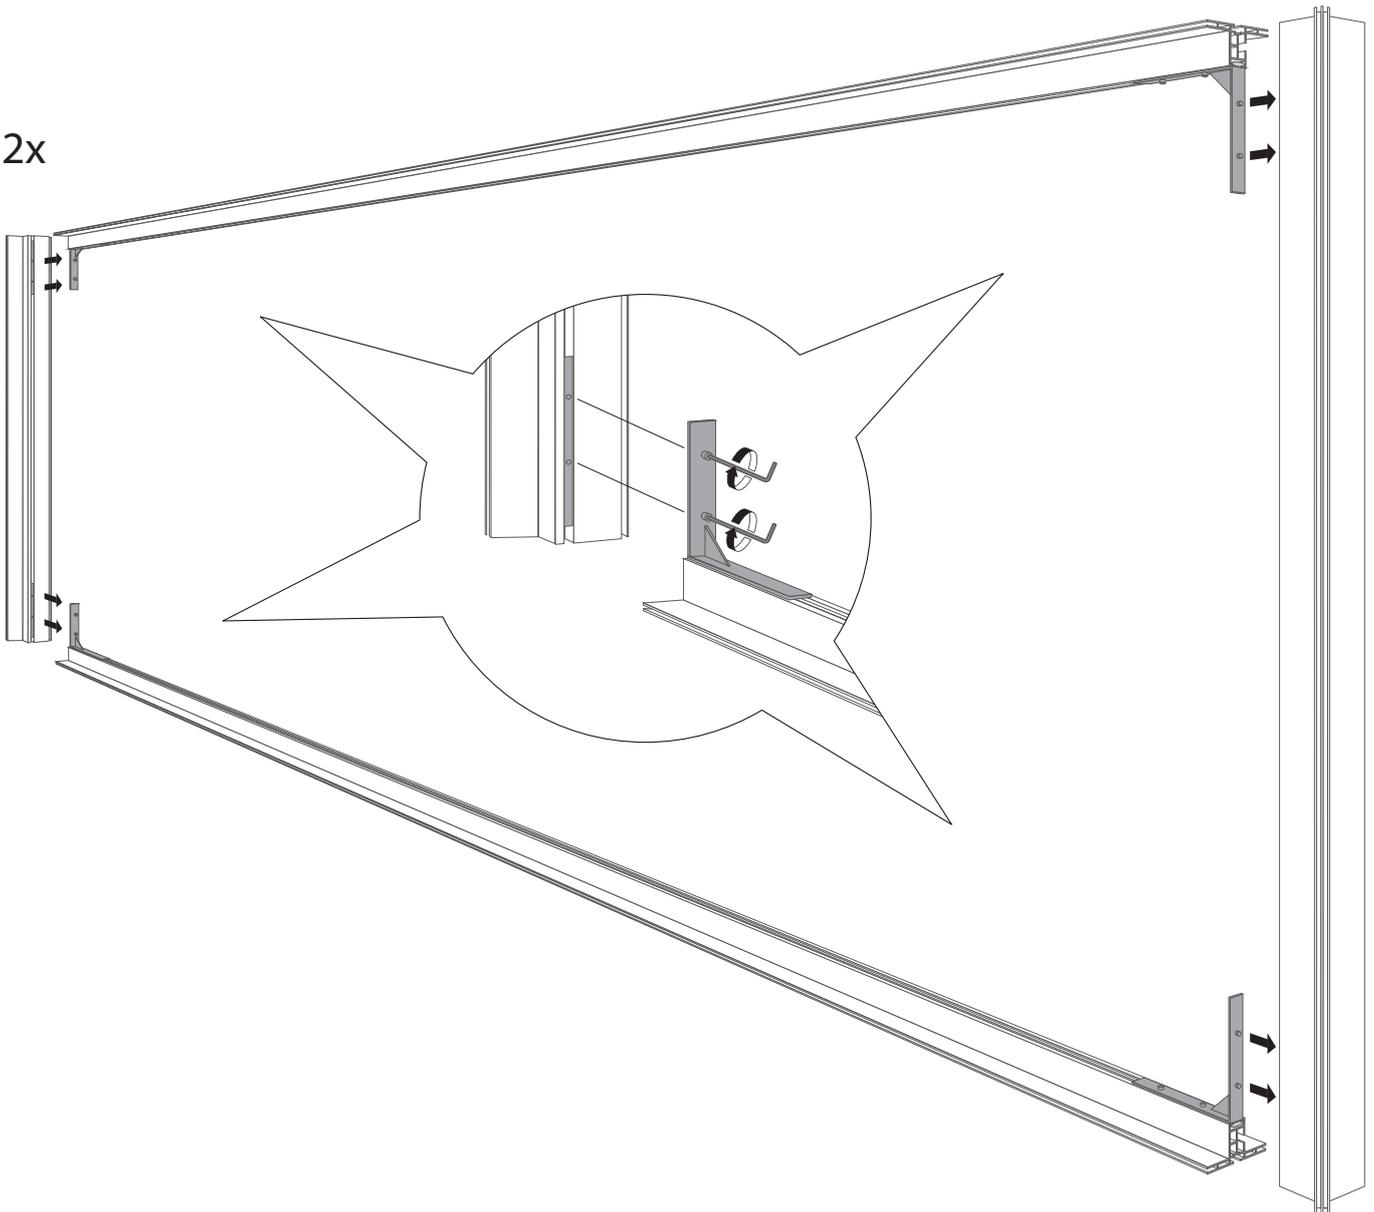


2

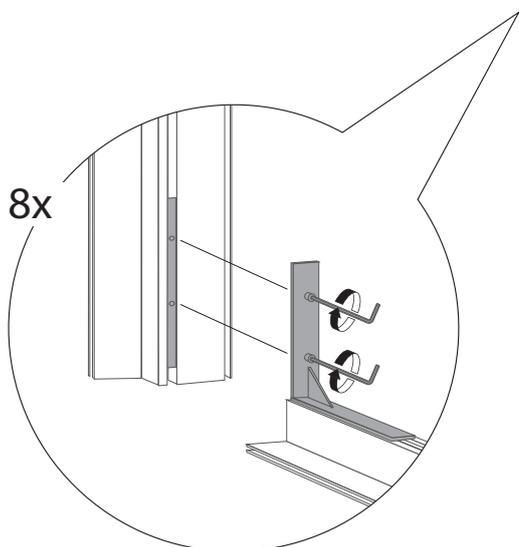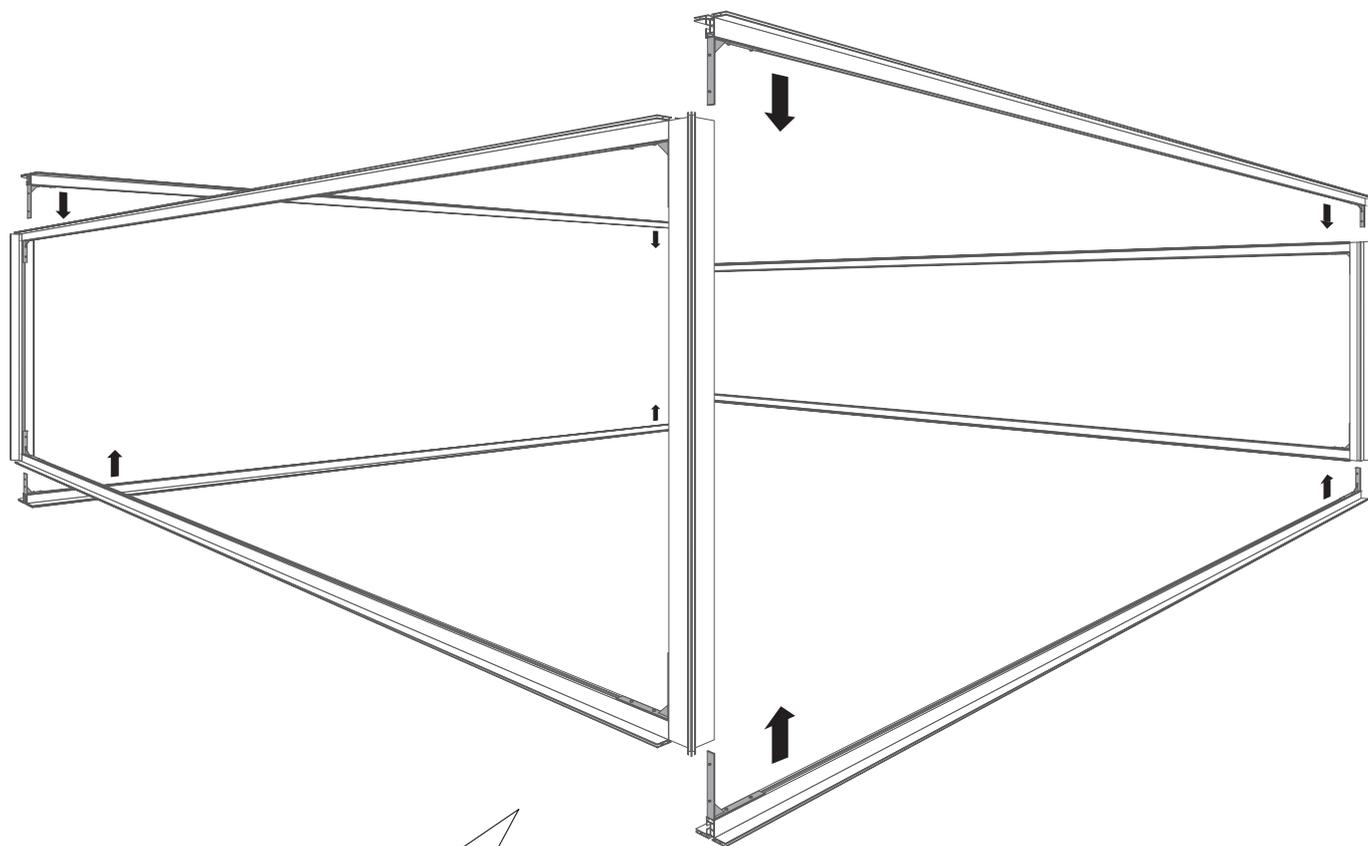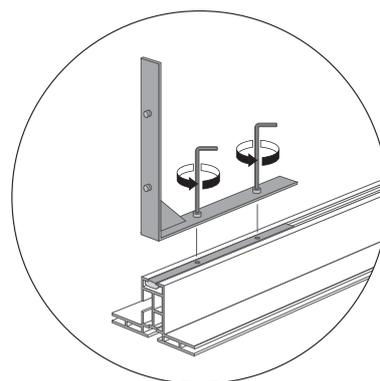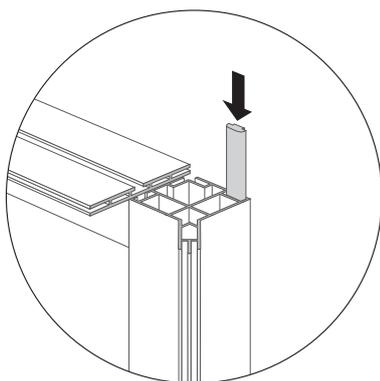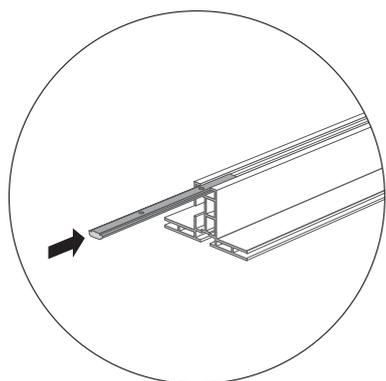


3

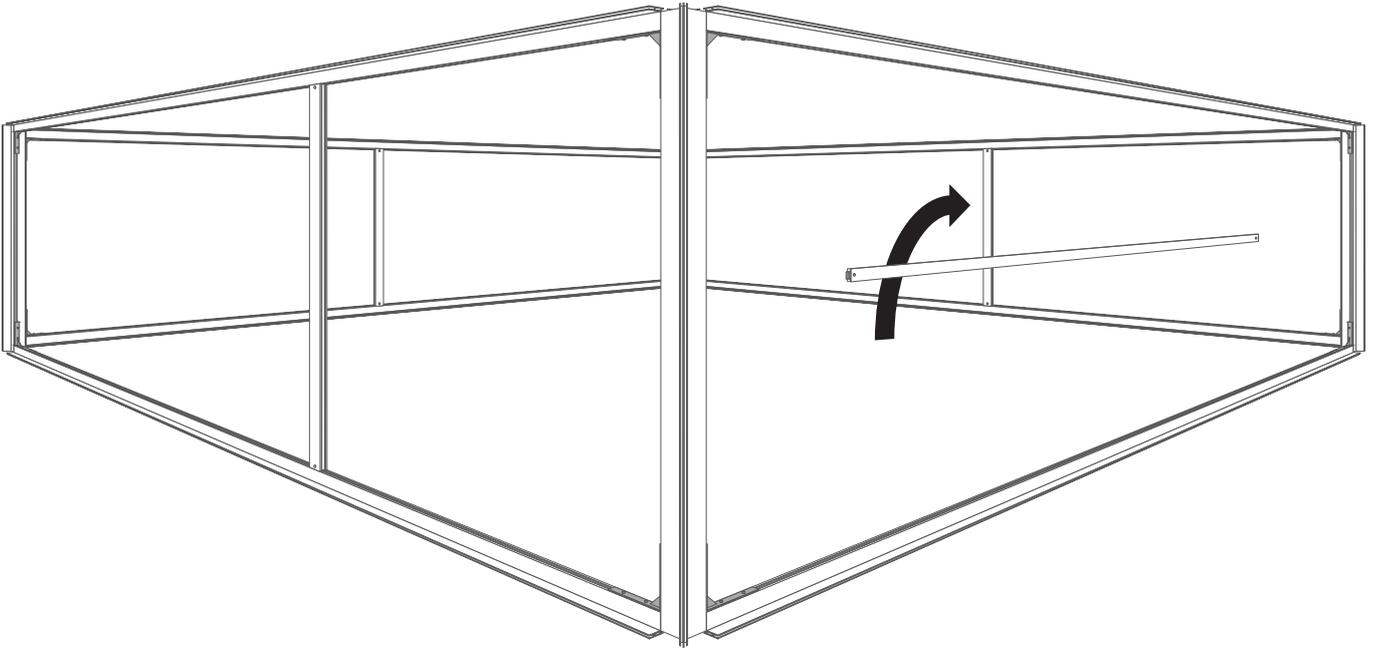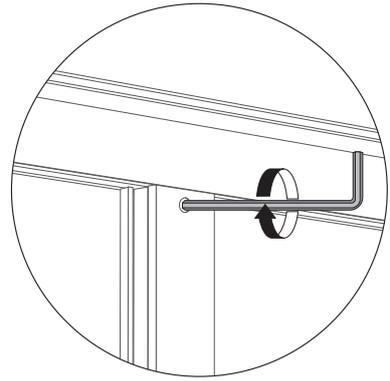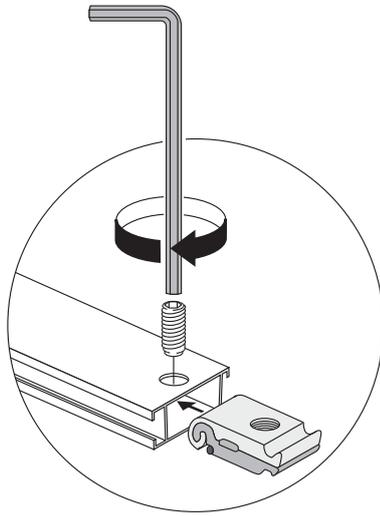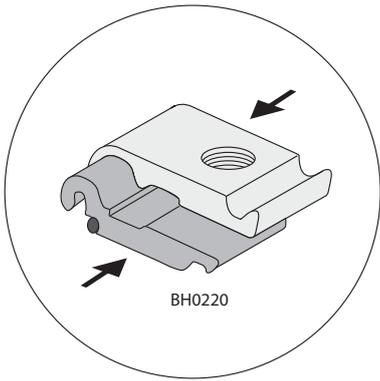


4

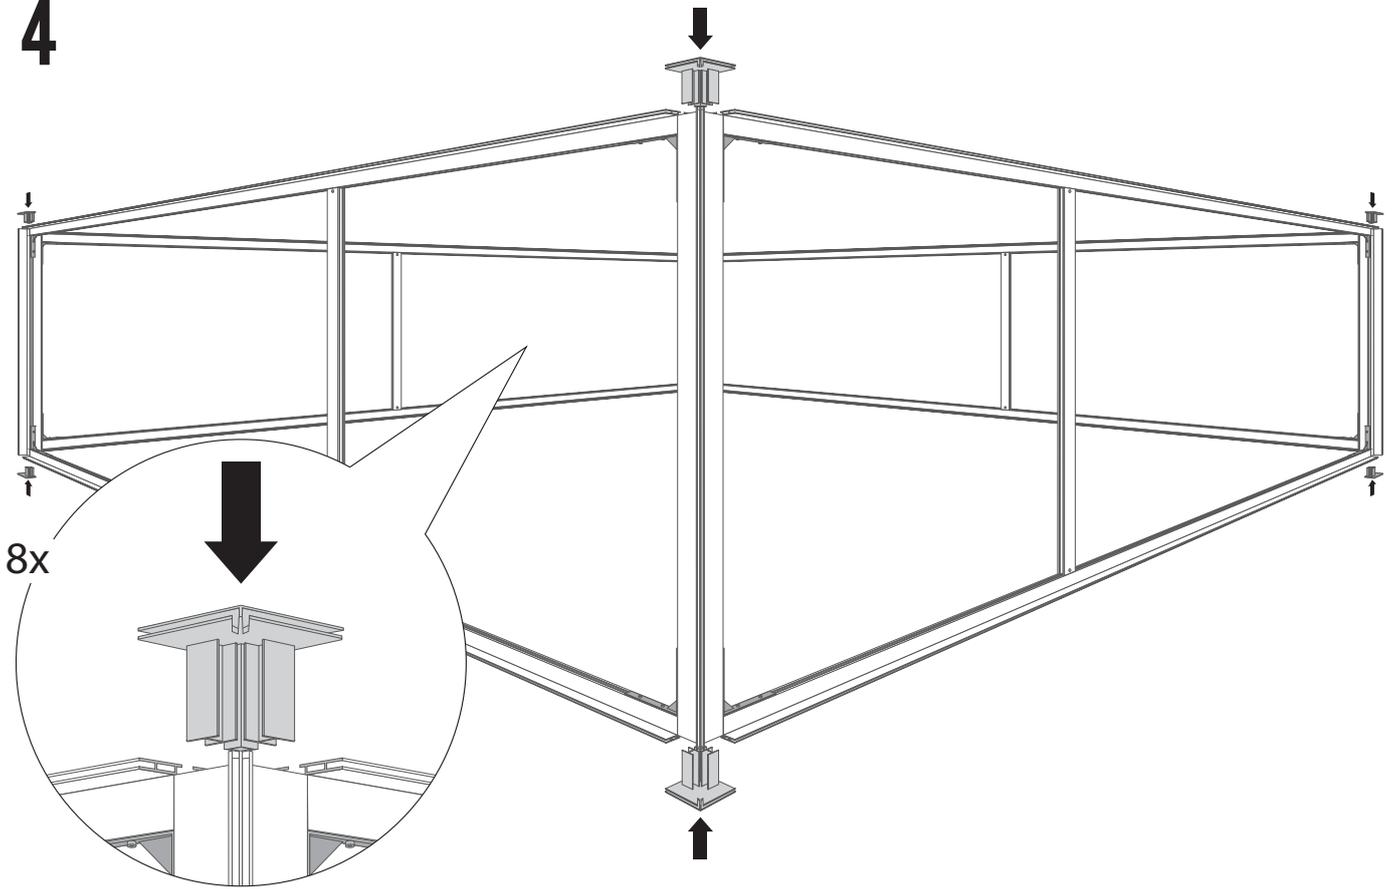


5

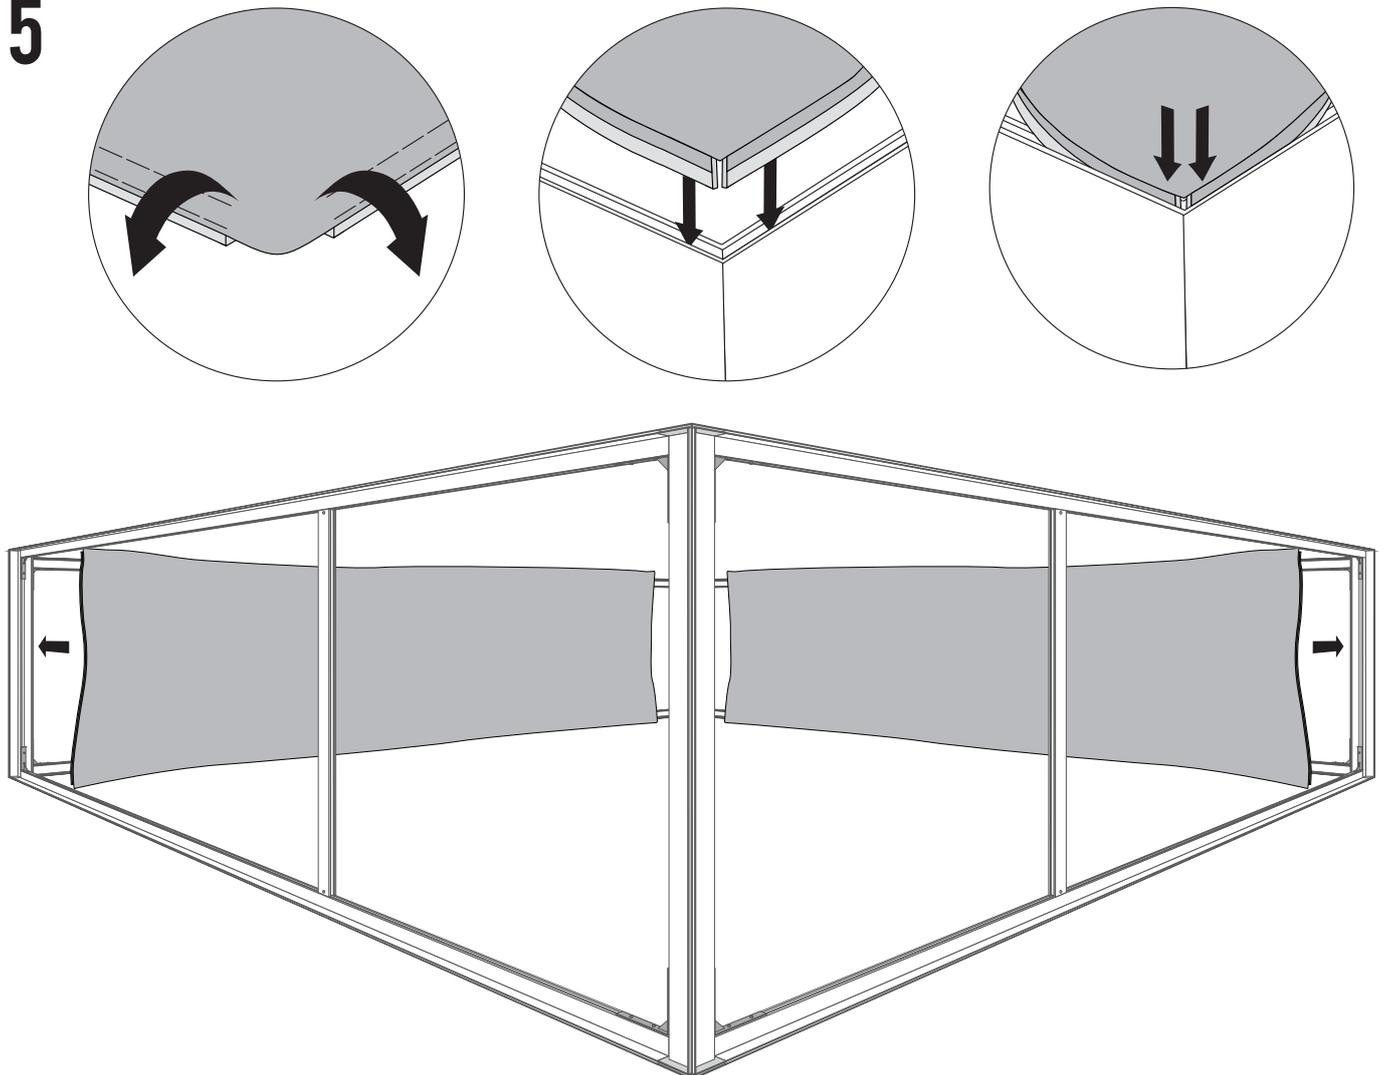


6

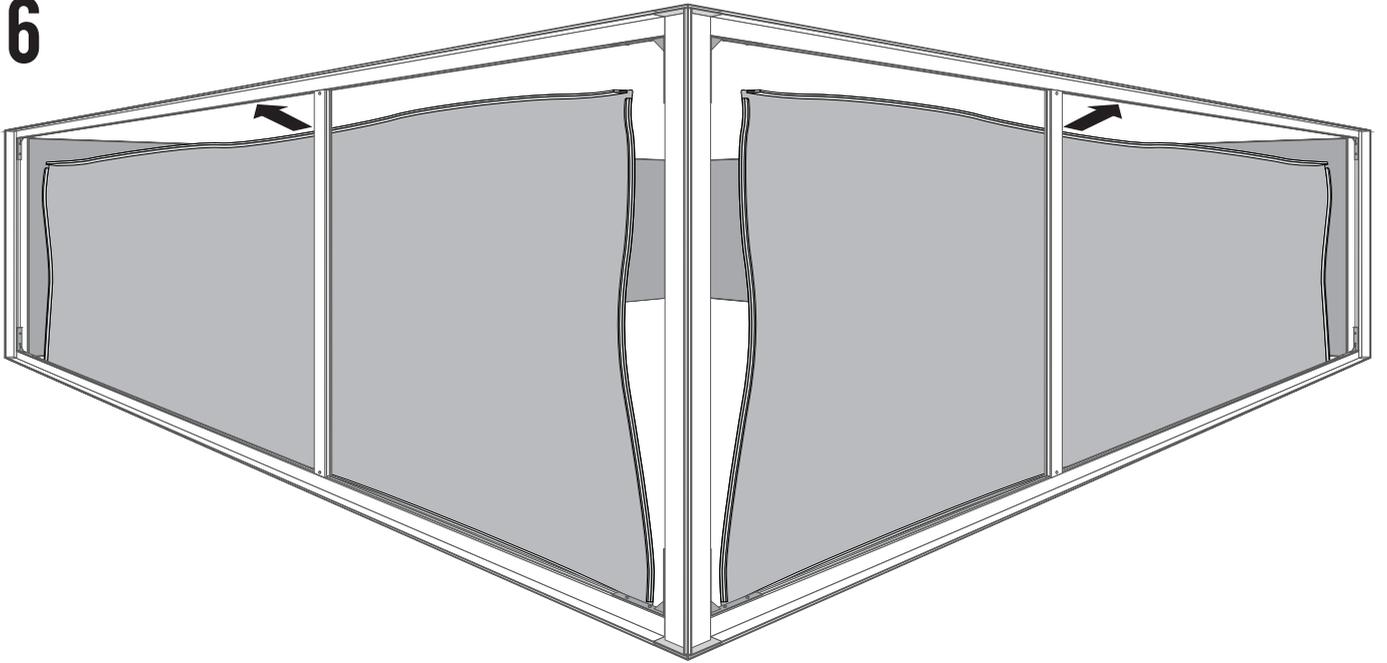

7

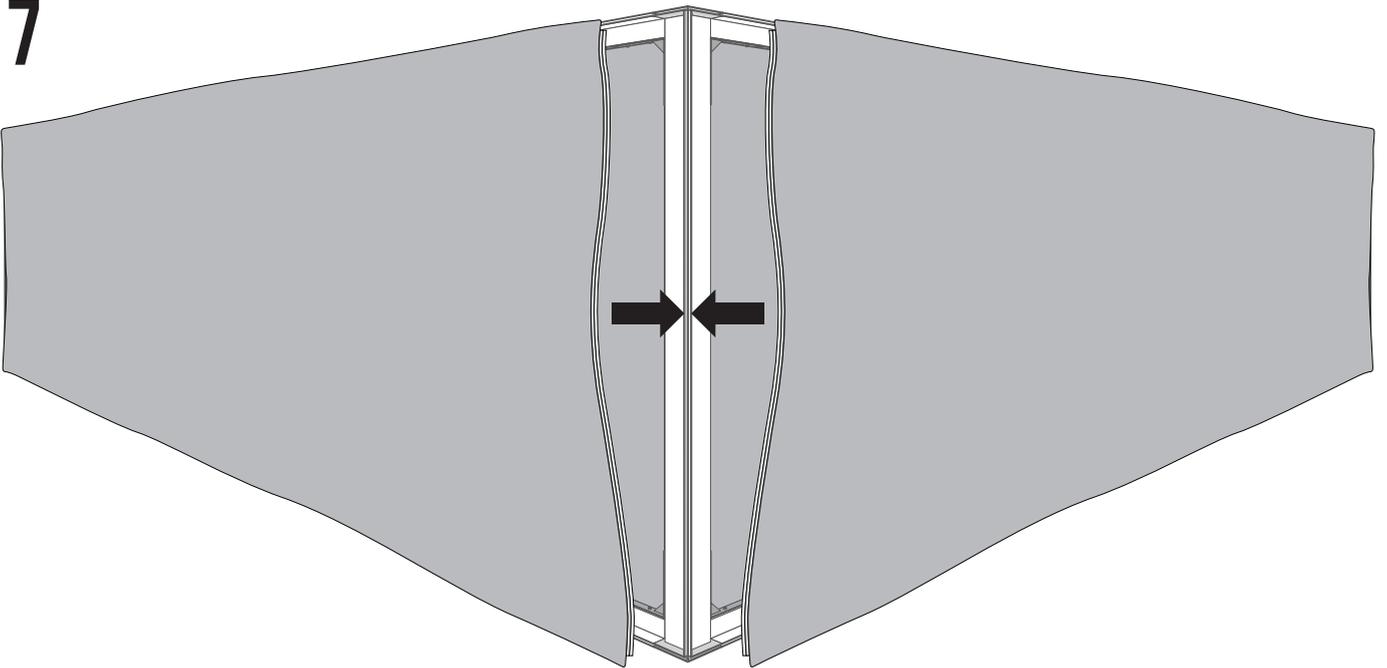

8

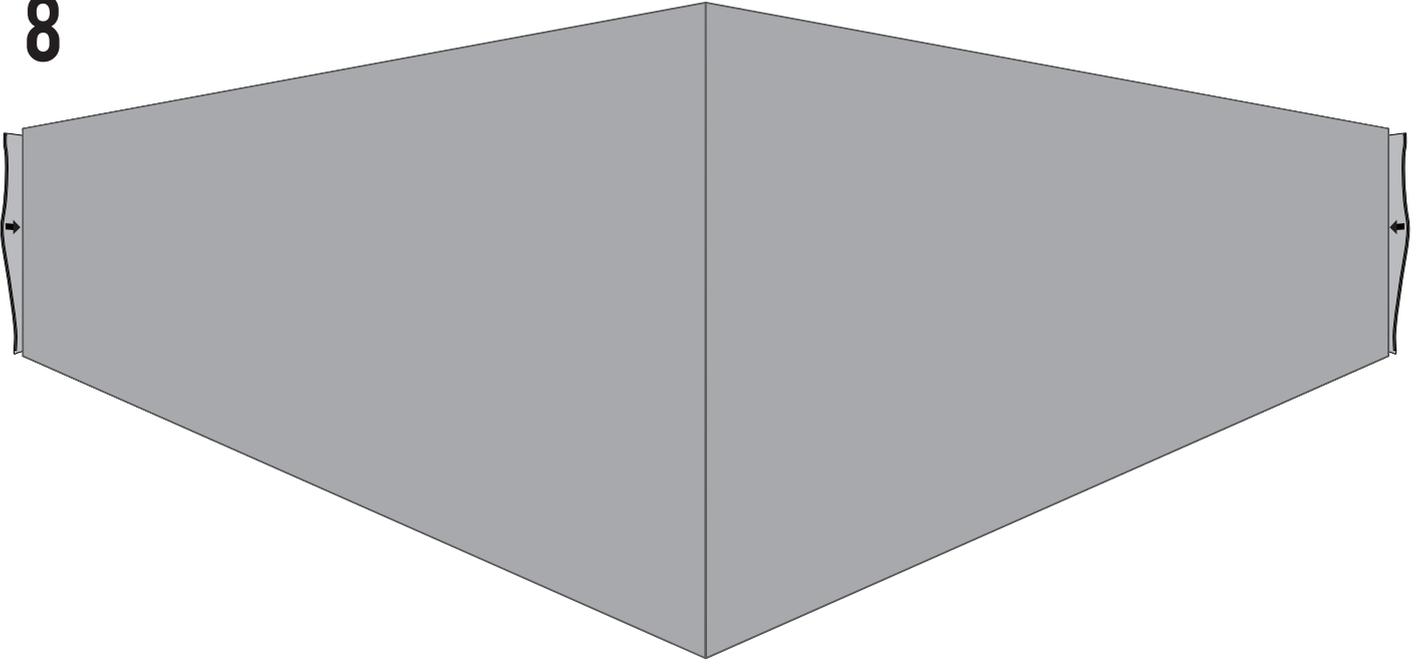

9

