




1

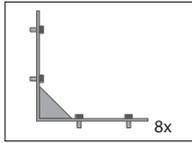

BH0280 (1)

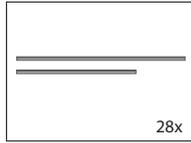

BH0280 (2)



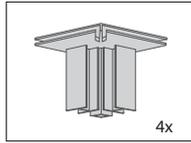


BH0725


U-FORMATION CONCEALED CORNER

INSTALLING THE CORNERS

4x



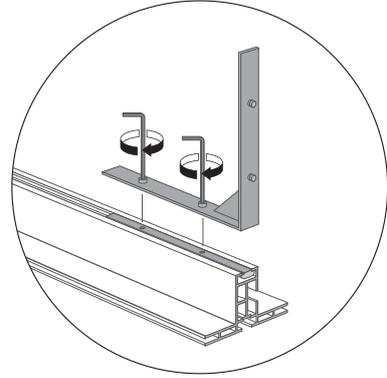
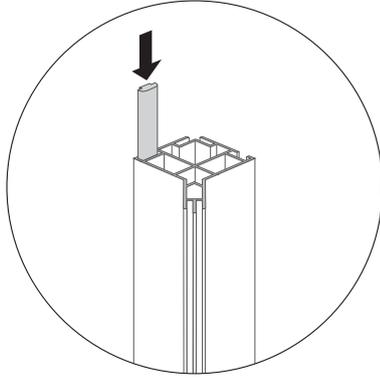
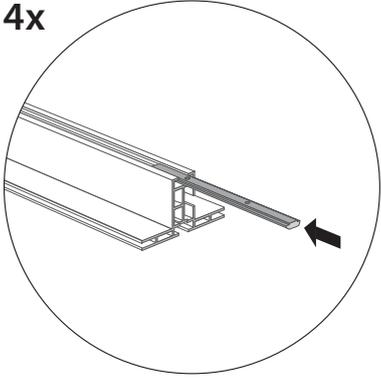


1x

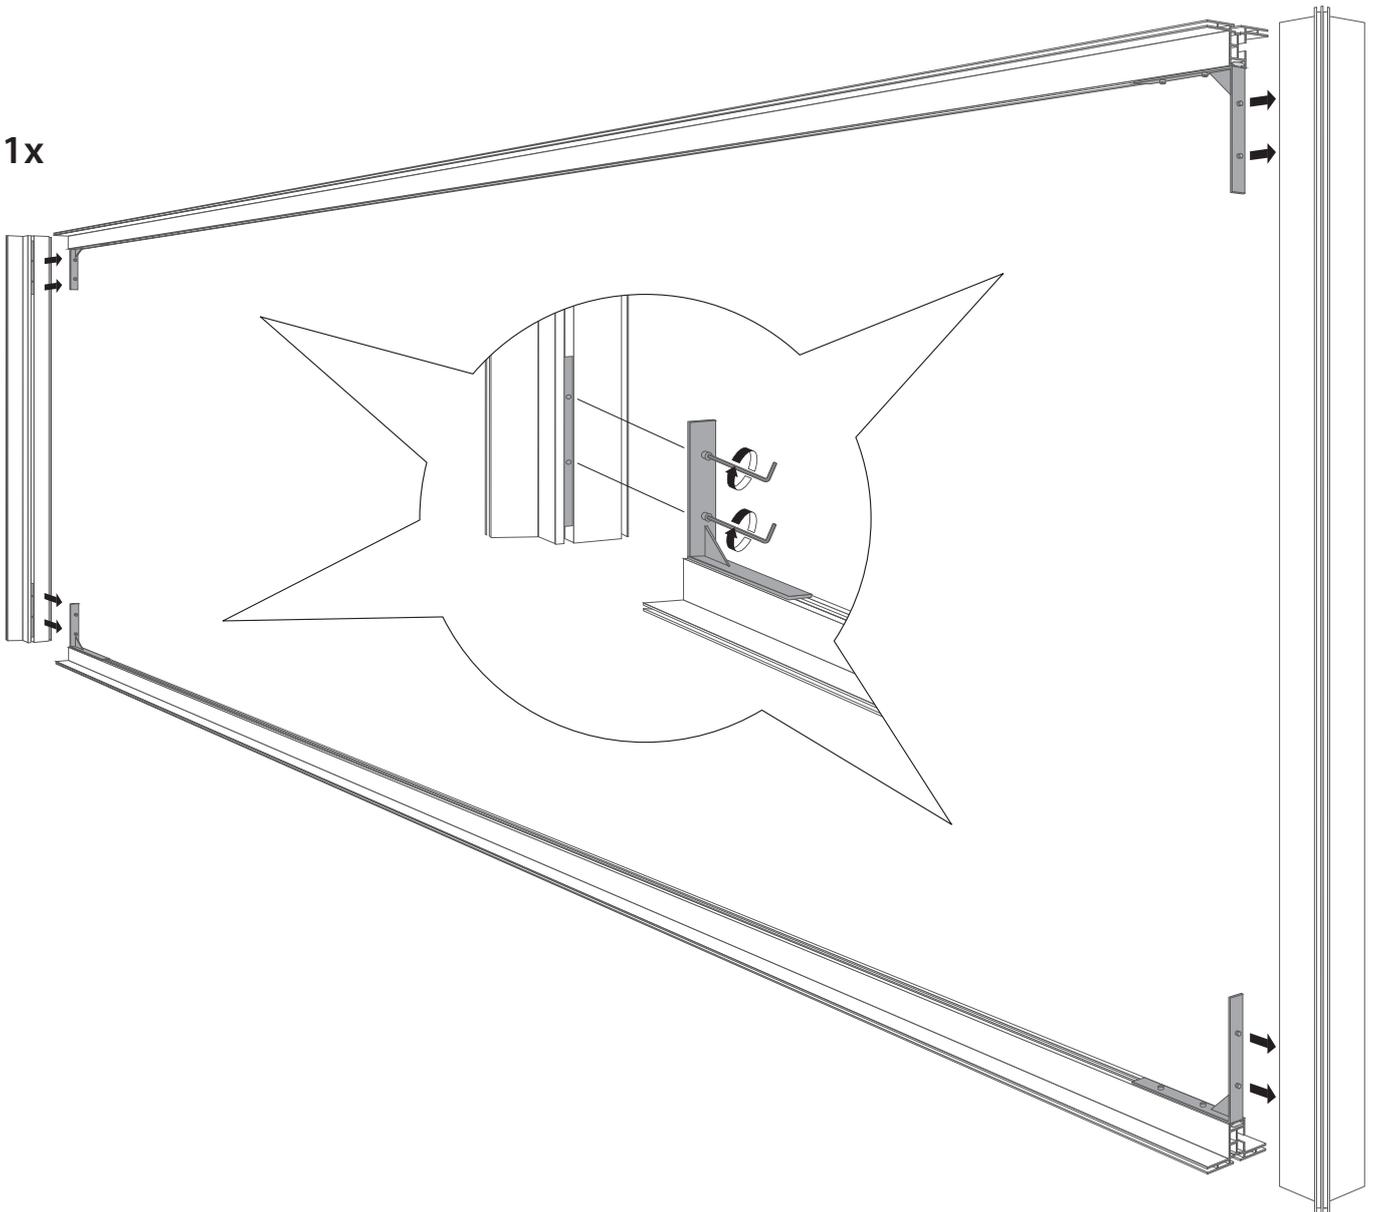


2

4x

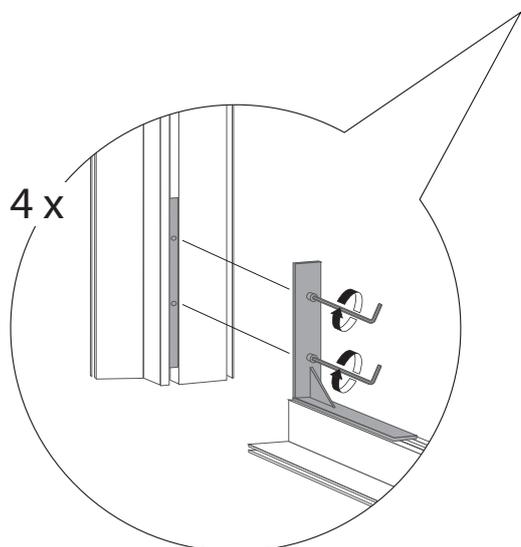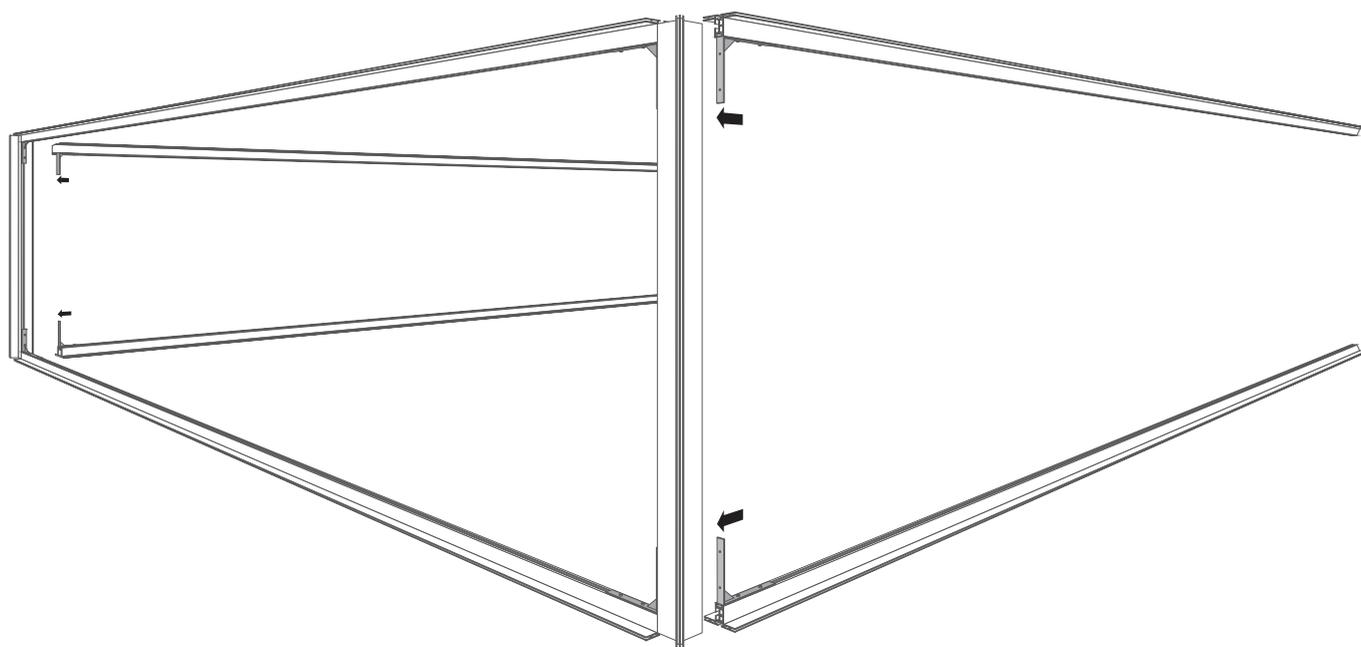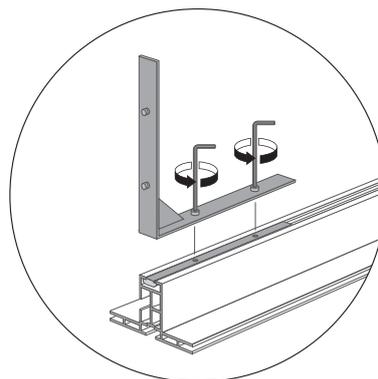
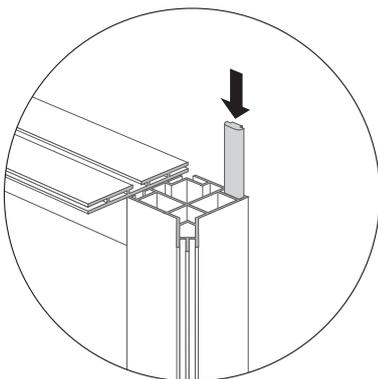
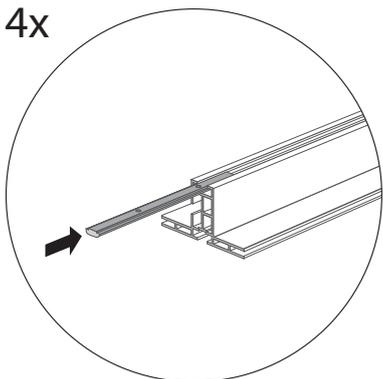


3

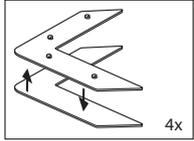


BH0200





4x

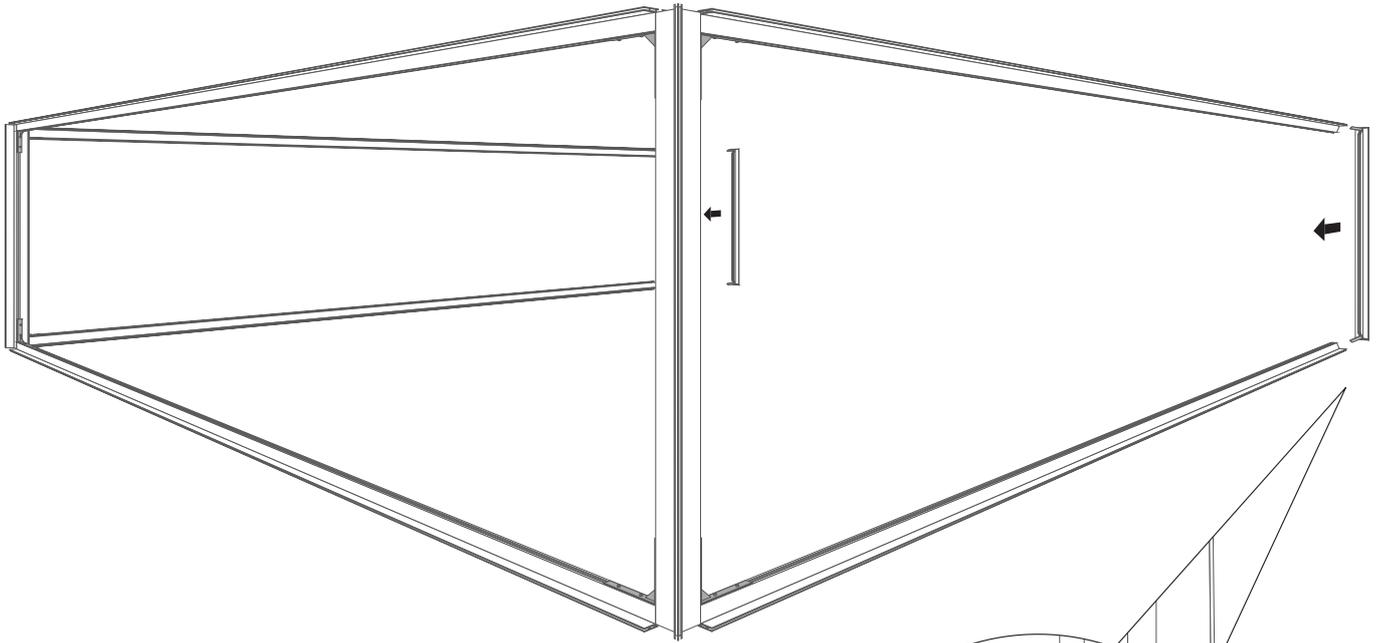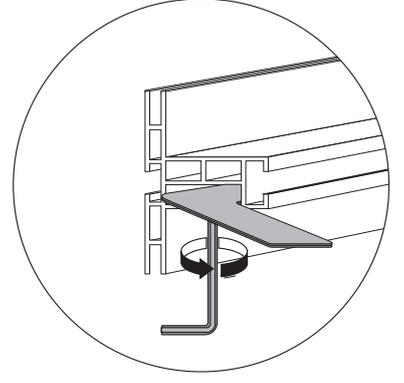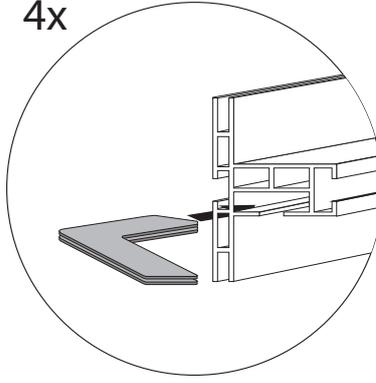


2x

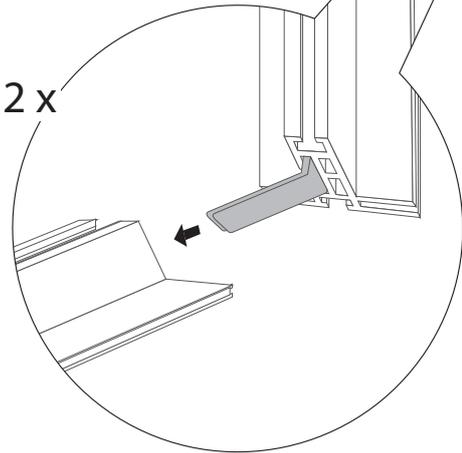


4

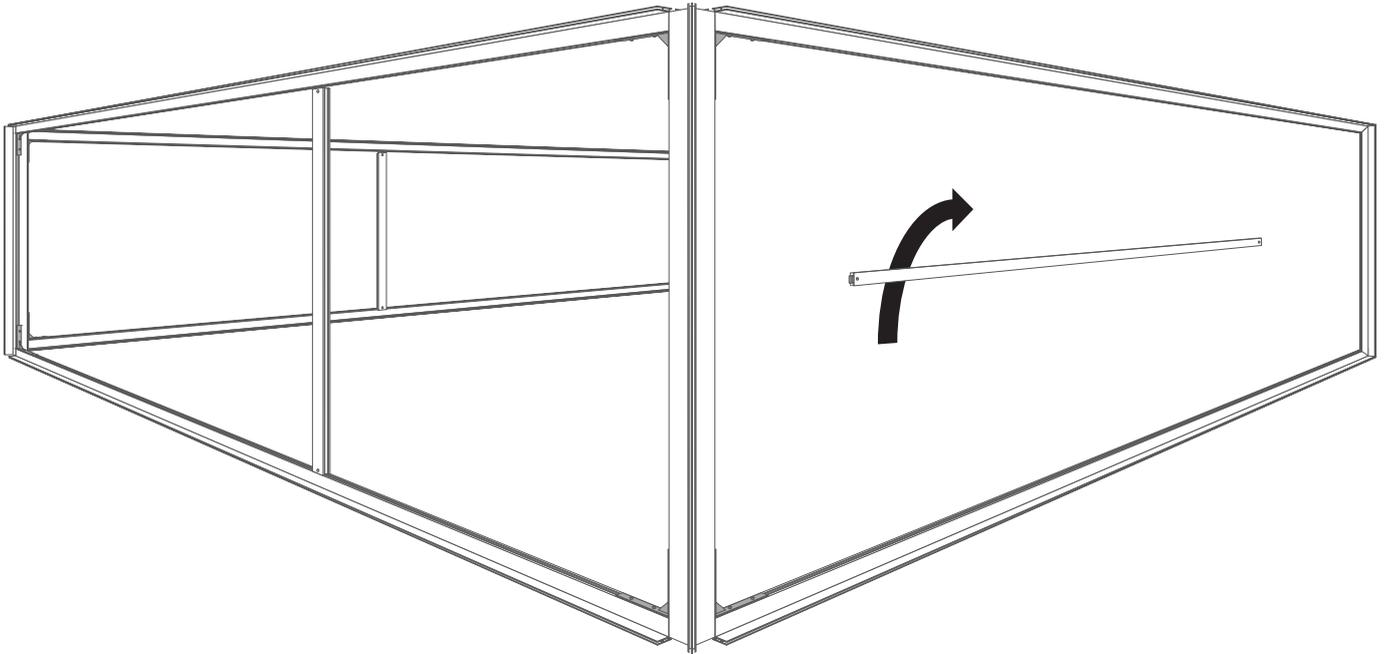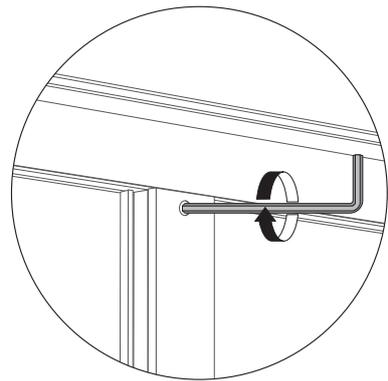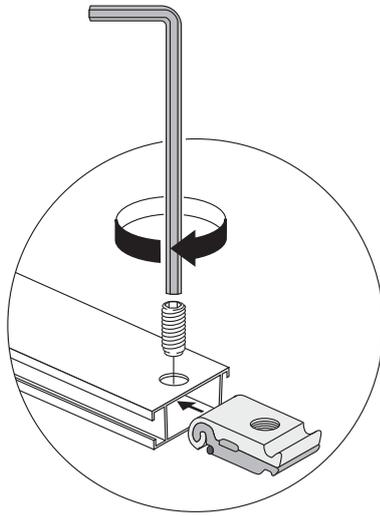
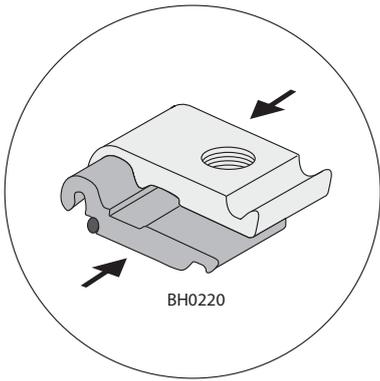


5

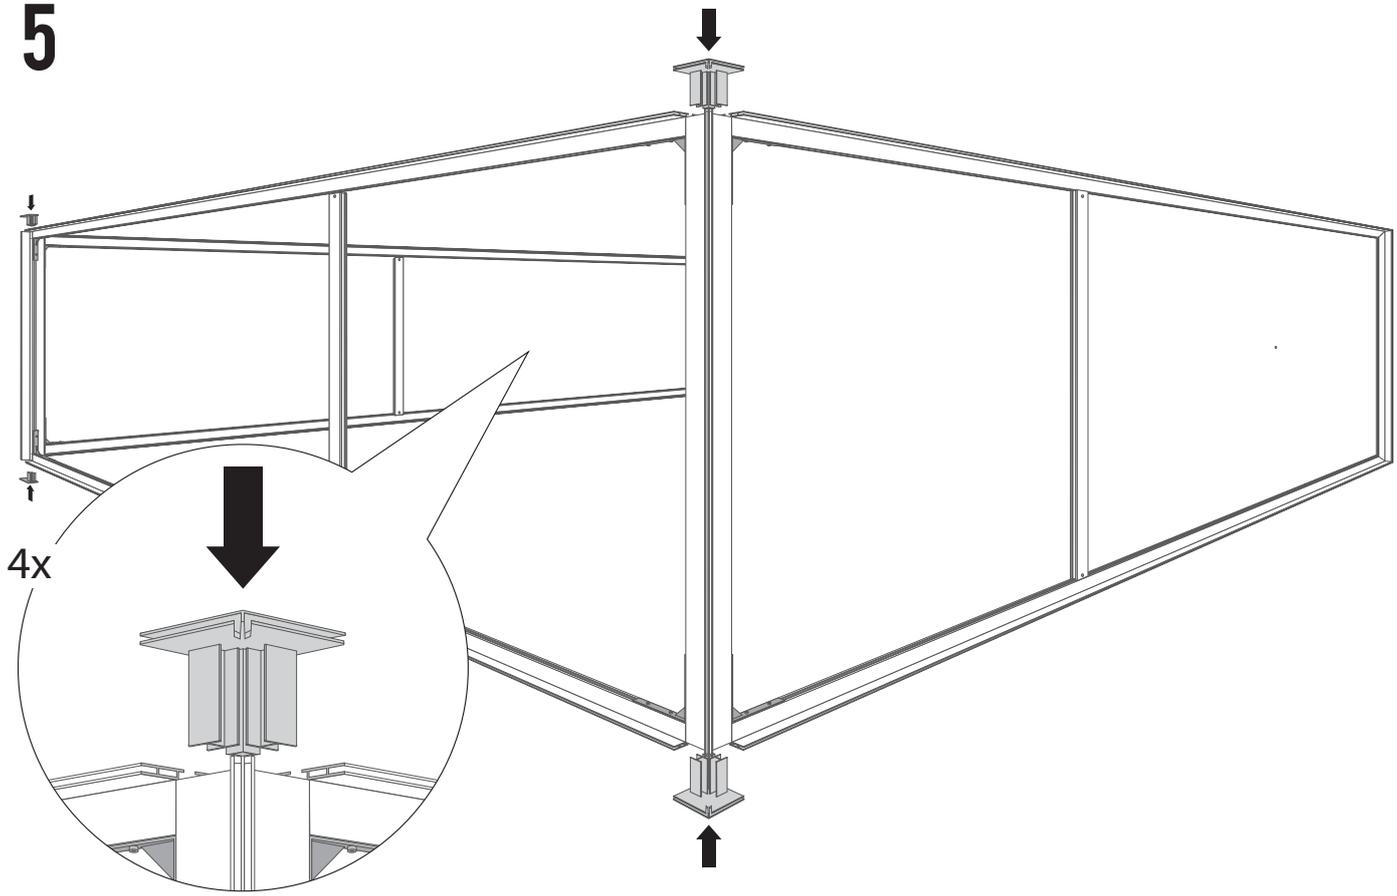


6

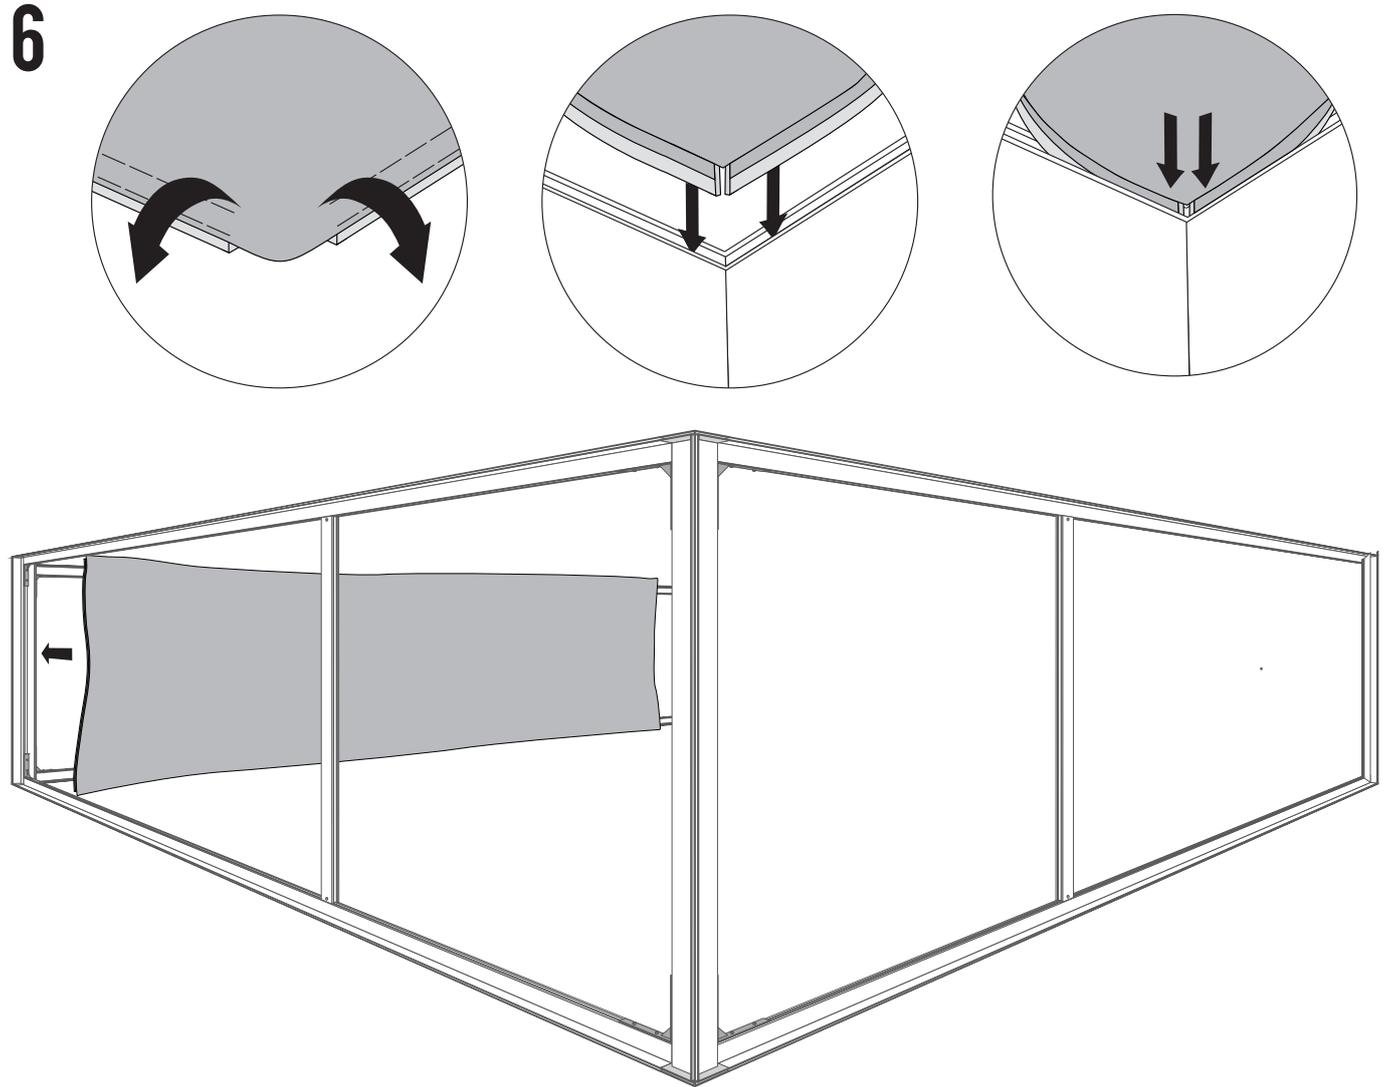

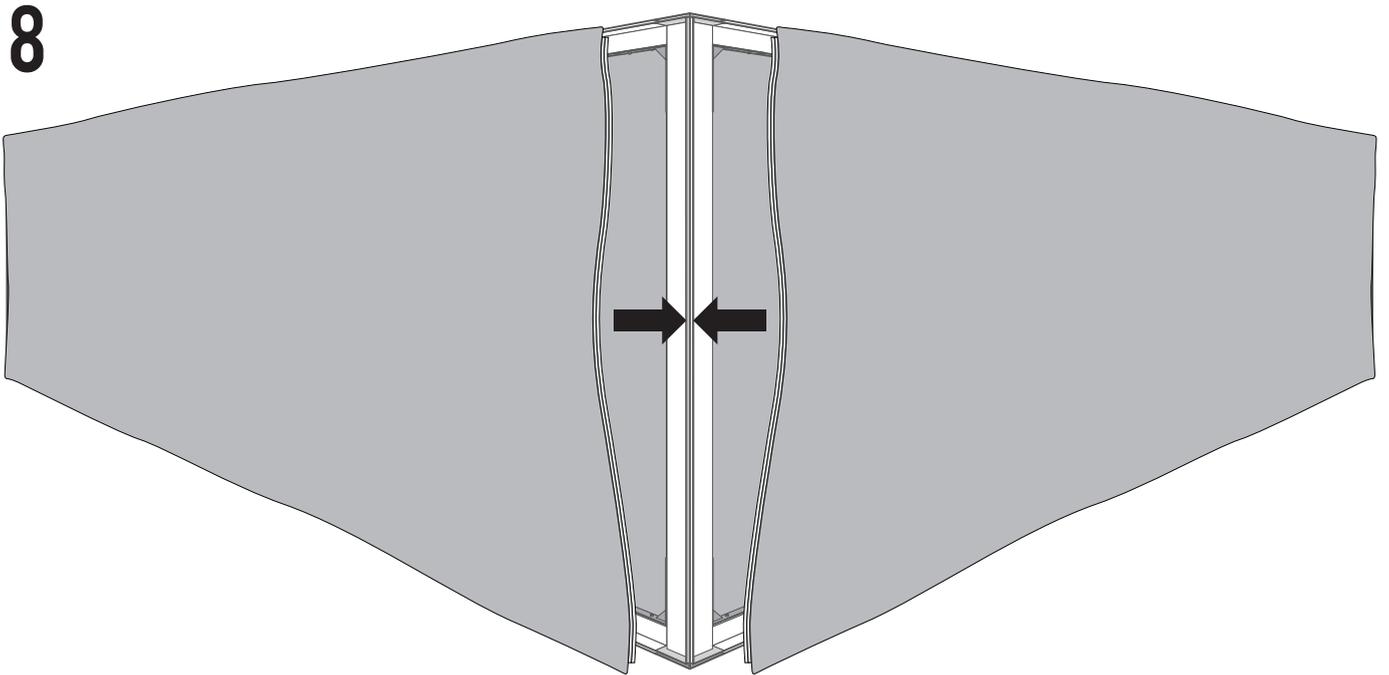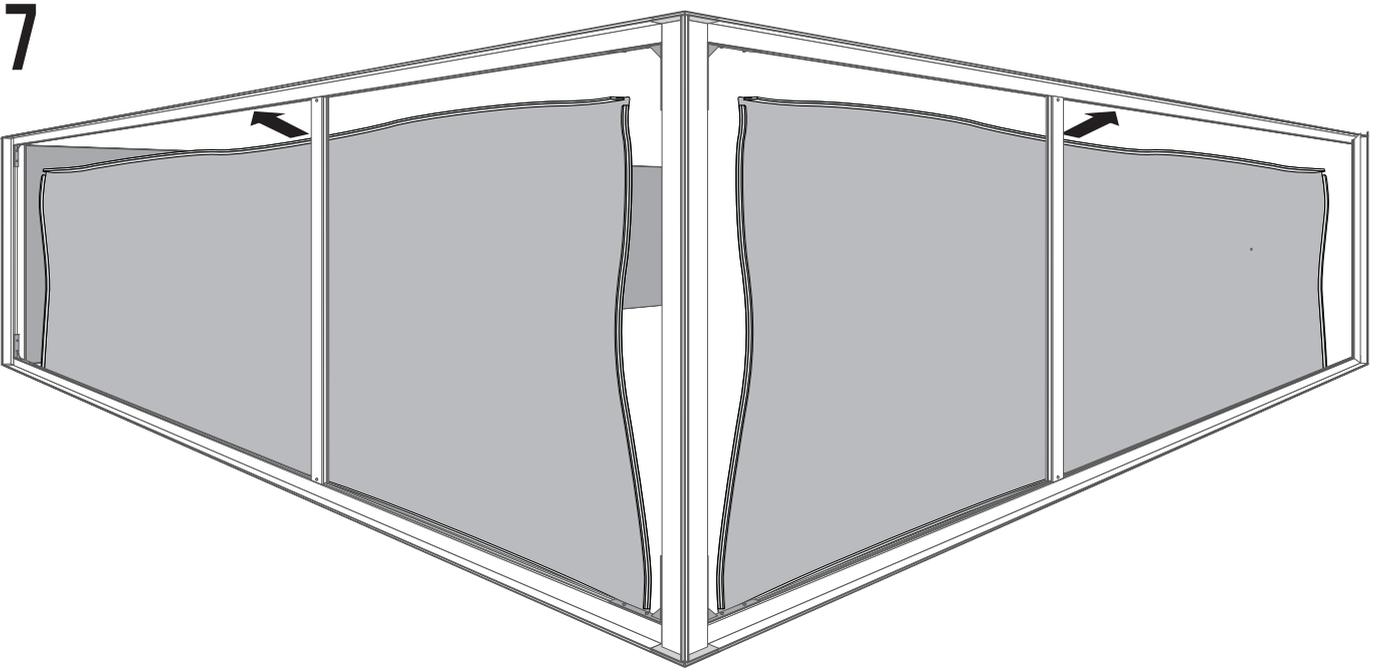

9

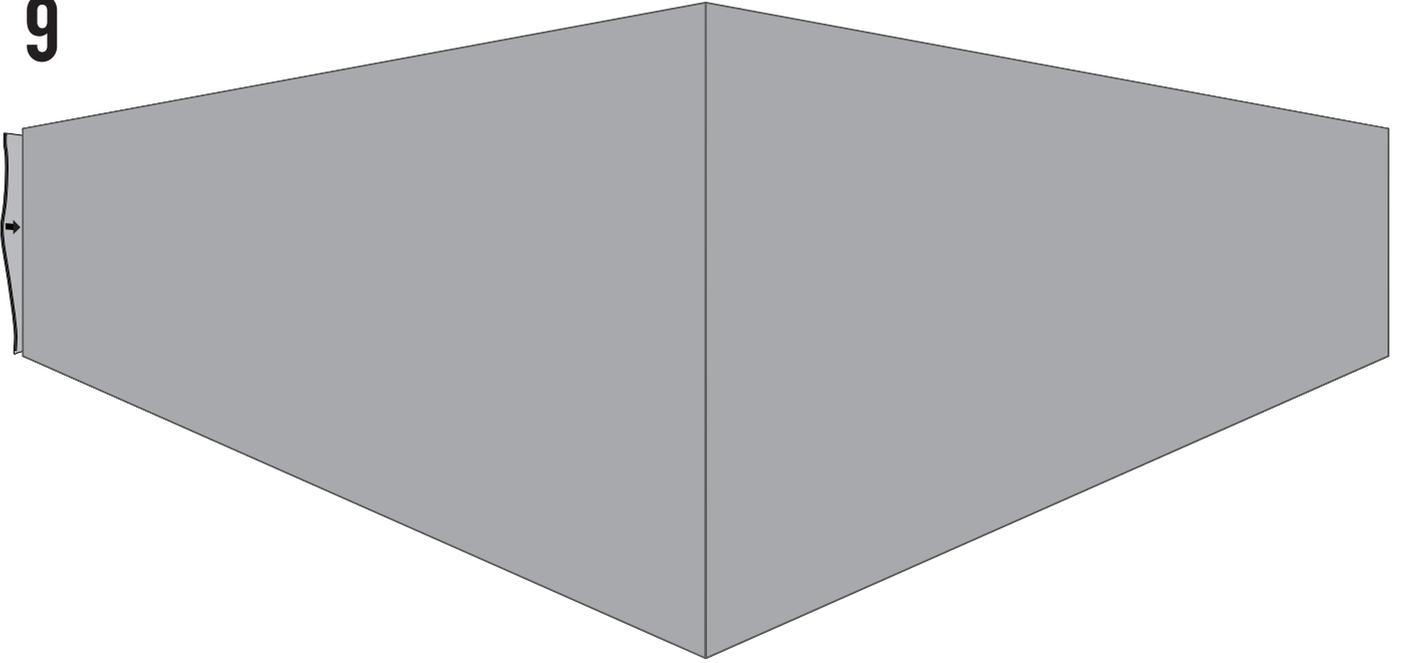

10

